



HTHP Filter Press for Cement Testing

with 175-mL, Double-Capped Test Cell and CO, Pressuring Assemblies

#170-00-5: (115 V) #170-01-5: (230 V)

Instruction Manual

Updated 6/14/2019 Ver. 3

OFI Testing Equipment, Inc.

11302 Steeplecrest Dr. · Houston, Texas · 77065 · U.S.A. Tele: 832.320.7300 · Fax: 713.880.9886 · www.ofite.com

Table of | s contents | c

Intro	
Specifications	2
Components	
Safety	
Operation	
Diagram	
Warranty and Return Policy	12

Intro

The OFITE HTHP Filter Press is designed for testing drilling fluids and cement under elevated temperatures and pressures. This simulates various downhole conditions and provides a reliable method for determining the effectiveness of the material being tested. The complete assembly consists of the following:

- A controlled pressure source (CO₂)
- Two CO₂ pressure regulators (primary and back pressure)
- A high-pressure test cell
- A heating jacket for heating the test cell
- A suitable stand

Specifications

Size: $7.5" \times 11" \times 23.5" (19.1 \times 27.9 \times 59.7 \text{ cm})$

Weight: 27 lbs. (12.3 kg)

Shipping Size: $20" \times 13" \times 13" (51 \times 33 \times 33 \text{ cm})$

Shipping Weight: 33 lbs. (15 kg)

Maximum Temperature

(Heating Jacket): 350°F (177°C)

Maximum Pressure (Cell): 1,500 PSI (10,343 kPa)
Maximum Pressure (Receiver): 750 psi (5.1 MPa)

Pressure Source: Two CO₂ Pressuring Assemblies

Test Cell Capacity: 175 mL

Power Requirement: #170-00-5: 115V; #170-01-5: 230V

Heater: 400 Watt

Components

```
#153-14 Graduated Cylinder, 50 mL × 1 mL
#154-10
                      Dual-Scale Thermometer with Dial, 5" Stem, 50° - 500°F (0° -
                      250°C)
#170-04 CO Pressurize Unit:
       #143-02-10 CO, Puncture Head Assembly
       #143-03
                                 Barrel for CO, Cartridge
       #170-08
                                 Regulator
                                 Manifold Block
       #170-20
                                 1/8" × 1/8" NPT Male Needle Valve
       #170-32
       #171-23-1
                                 Safety Pin with Lanyard
                                 1,500-PSI Gauge; 2"; 1/4" NPT Bottom
       #171-34
#170-06 Back Pressure Receiver; 15-mL Stainless Steel Tube for CO,
       #143-00
                                 Regulator
                                 200-PSI Gauge; 1/8" Bottom Connection
       #143-01
       #143-02-10 CO<sub>2</sub> Puncture Head Assembly
                                 Barrel for CO, Cartridge
       #143-03
                                 Safety Bleeder Valve
       #143-06
                                 1/8" 90 Street Ell
       #144-11
       #170-07
                                 O-ring
                                 Receiver Body
       #170-28
                                 1/8" × 1/8" NPT Male Needle Valve
       #170-32
       #171-23-1
                                 Safety Pin with Lanyard
#170-19 Filter Paper; 2½" (6.35 cm); Specially Hardened for Filter Presses
#170-35
                    6" Adjustable Wrench
#170-45
                    Test Cell Assembly, Double-Capped for Cement Testing, With
                      Cement Screens, 2000 PSI
       #170-13-3 O-ring; Viton; Qtv: 4
       #170-16
                                 Valve Stem; Qty: 2
       #170-17
                                 Valve Stem O-ring; Qty: 4
                                 Detachable Screen; 325-Mesh with 60-Mesh Backup; Qty: 2
       #170-18
       #170-24
                                 2,000-PSI End Cap; Qty: 2
       #170-26-1 Hardened Locking Screw; Qty: 12
                                 3 Nation Wrench 3 Nation 1 Na
       #170-27
                                 Cell Body
       #170-45-3
#170-00-1 Heating Jacket; 115 Volt:
#170-01-1 Heating Jacket; 230 Volt:
                                 Male Connector for Power Cable (230V)
       #164-32
                                 Thermostat for HTHP Filter Press 50-500
       #170-05
                                 Insulation Board
       #170-09
                                 Thermostat Pilot Light
       #170-10
                                 Heating Element; 115V; 200W; Qty: 2
       #170-11
       #170-15
                                 Base
                                 Stand Support Rod; Qty: 2
       #170-21
                                 Aluminum Well
       #170-25
                                 Stainless Steel Thermostat Cover
       #170-30
       #170-44
                                 1/2" Rubber Foot; Qty: 4
       #171-32
                                 Midget Knob
       #171-82
                                 8' Power Cord with Male Plug Only; 16/3 SJ; Round (115V)
```

Optional:

#143-05: EZ Puncture CO_2 Bulbs; 8-Gram; UN #1013; Package of 10

#170-03: Stainless Steel Carrying Case

#170-13 O-ring for Test Cell, Buna, For tests below 300°F

#170-33: HTHP Cell Cap Puller

#170-40: Test Cell Removal and Carrying Tool

Safety

Nitrogen must be supplied in an approved Nitrogen Gas Cylinder and secured to meet safety standards.

Carbon Dioxide gas is normally supplied in small bulbs or cartridges, which contain approximately 900 PSI (6,206 kPa) pressure when new. Because they are highly portable, they are usually used in field operations. These bulbs should not be exposed to high heat (50°C/120°F) as they can explode if over heated.

Carbon Dioxide cartridges are pressurized to approximately 900 PSI at 1 atmosphere (sea level). Therefore, they should never be transported by airplane without proper packing because cabin de-pressurization may cause an explosion.




Do not use nitrous oxide cartridges as pressure sources for high-temperature, high-pressure (HTHP) filtration. Under high temperature and pressure, nitrous oxide can detonate in the presence of grease, oil, or carbonaceous materials. Nitrous oxide cartridges are to be used only for Garrett Gas Train Carbonate Analysis.


Due to the high temperatures and pressures involved in this test, extreme care must be exercised at all times. All safety precautions must be met, especially in the cell breakdown procedure after the filtration procedure has been completed.

Cell Corrosion

Test fluids under high tempreature and pressure can corrode the cell body and caps. Carefully inspect the cell body and calls for corrosion before and after each test.

Some materials are more susceptible to corrosion than other. Also, some fluids and additives are more corrosive than others. OFITE offers a variety of cell materials for different levels of corrosion resistance and cost.

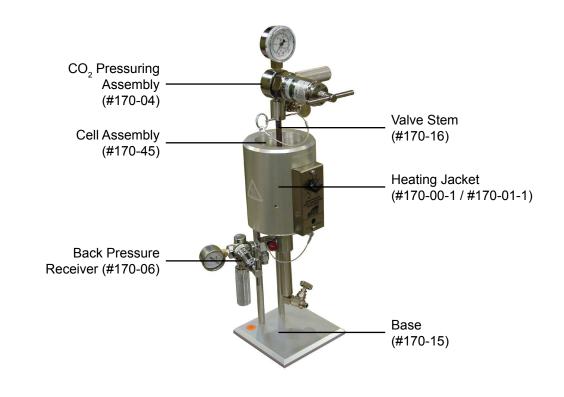

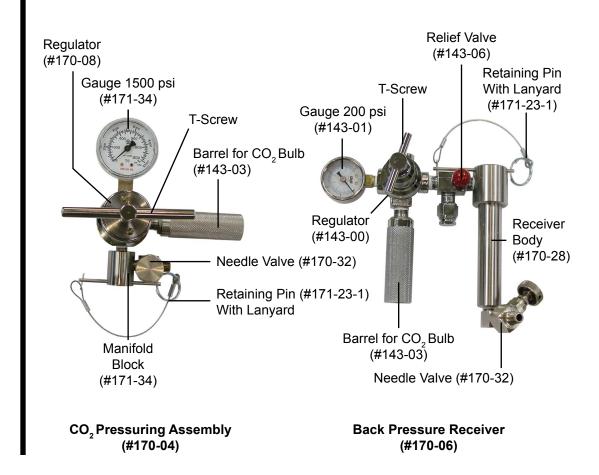


Operation

- Connect the heating well power cord to an appropriate power source. Place a dial-type metal thermometer into the well in the heating jacket and preheat to 10°F (6°C) above the desired test temperature. A pilot light will come on when the heating jacket is at the desired temperature as selected by the thermostat control knob.
- Be sure all of the o-rings on the valve stems are in good working condition (pliable with no nicks or cuts, etc.), and are not damaged during the assembly procedures. Place a thin film of silicone grease on all o-rings. Place an o-ring into one end of the test cell and place the screen on top of it with the flat side facing down. Slowly push one of the cell caps into the cell, making sure the arrow on the cap lines up with the arrow on the cell body. Tighten the locking screws with the supplied allen wrench. Screw a valve stem into the cell cap and tighten it completely.

Standard Buna N o-rings (#170-13) should be used only for tests up to 300°F (149°C). For tests over 300°F (149°C), use Viton® o-rings (#170-13-3). After tests that come close to the maximum temperature, it will probably be necessary to replace the o-rings.


If the cap locking screw seats are oval shaped and no longer round, there is a possibility of stress failure and the cap should be replaced.

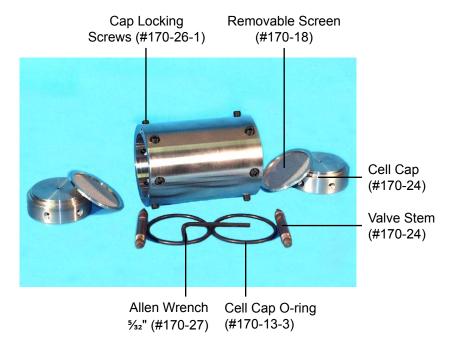

the sample into the cell. Do not fill the cell closer than 0.5" (13 mm) from the o-ring groove to allow for heat expansion of the fluid. Be careful not to spill fluid on the o-ring groove inside the cell.








4. Repeat step 2 on the other end of the cell.



- 5. Place the cell in the heating jacket. Rotate the cell in the heating jacket so that the pin in the bottom of the heating well seats into the hole in the bottom of the cell. This will anchor the cell inside the well and prevent the cell from rotating as the valve stems are opened and closed. Transfer the thermometer from the heating jacket to the thermometer well within the cell.
- 6. Connect the pressuring assembly to the top valve stem and lock it in place with the retaining pin. Place the back pressure receiver on the bottom valve assembly and also lock it in place with the retaining pin.

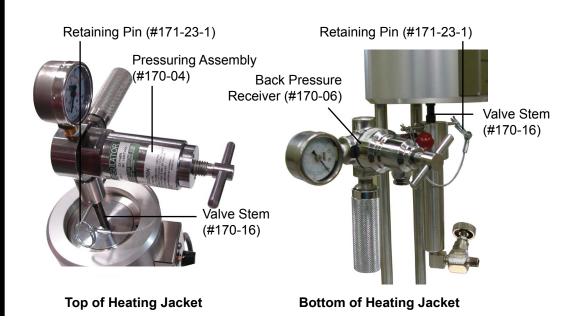

7. Keeping the valves closed, adjust the top and bottom regulators to the recommended back pressure for your test. Open (loosen) the top valve stem ½ turn to pressurize the sample. Maintain this pressure on the fluid until the desired temperature is stabilized, as indicated by the thermometer. The heating time of the sample should never exceed one hour.



The upper and lower limits of the test pressure differential are determined by the test temperature. As this temperature exceeds 212°F (100°C), the back pressure must be increased in order to prevent vaporization of the filtrate. The 500 PSI differential pressure must be maintained, so the top pressure will have to be increased accordingly. The table below shows the pressures recommended for various test temperatures.

Recommended Minimum Back Pressure						
Test Tem	perature	Vapor Pressure		Minimum Back Pressure		
°F	°C	psi	kPa	psi	kPa	
200-299	95-149	12.1-67	84-462	100	700	
300-374	150-189	67-184	462-1269	200	1400	
375-399	190-199	184-247	1269-1704	275	1900	
400-424	200-219	247-326	1704-2245	350	2500	
425-450	220-230	326-422	2245-2912	450	3100	


- 8. When the fluid sample reaches the desired test temperature, increase the pressure on the top pressure unit to 500 PSI (3,448 kPa) more than the back pressure. Open (loosen) the bottom valve stem ½ turn to initiate filtration.
- Collect the filtrate for 30 minutes maintaining the selected test temperature within ± 5°F (± 3°C). If the back pressure rises above 100 PSI (690 kPa) during the test, cautiously reduce the pressure by opening the valve on the receiver and drawing off some of the filtrate into the graduated cylinder.
- 10. At the end of the test, close (tighten) the top and bottom valve stems to seal off the cell. Turn the regulator T-screws counter-clockwise to close off the flow of pressurized gas. Open the outlet valve on the back pressure receiver to collect all of the filtrate in the graduated cylinder. Release the pressure from the top and bottom pressuring units by opening the needle and/or bleeder valves.

11. Remove the top and bottom valve stem retaining pins and remove the top pressure and the back pressure assemblies. Drain any residual filtrate collected in the receiver into the graduated cylinder. Remove the cell from the heating jacket after once again checking that the cell valve stems are tightly closed. Allow it to cool to room temperature or quick cool the cell by immersion in cool water.



Pressure inside the sample cell will still be approximately 500 PSI (3,450 kPa). Keep the cell upright and cool it to room temperature before disassembling. The cell must be cool for at least one hour at room temperature or at least 10 minutes in cool water before loosening the cap locking screws and removing the cell cap.


- 12. Correct the total filtrate volume collected to a standard filtration test area of 7.1 in² (45.8 cm²) by doubling the filtrate volume collected in 30 minutes. Record this total filtrate volume (doubled), temperature, pressure, and time.
- 13. Place the cooled cell upright with the outlet side down. Open (loosen) the inlet valve stem to bleed off pressure from the cell body.



- 14. Loosen, but do not remove, the six cap locking screws, and separate the cap from the cell with a slight rocking motion. Discard the fluid inside the cell unless it is required for further testing.
- 15. Clean and dry the apparatus thoroughly after each use. Inspect and, if necessary, replace all of the o-rings.



Diagram

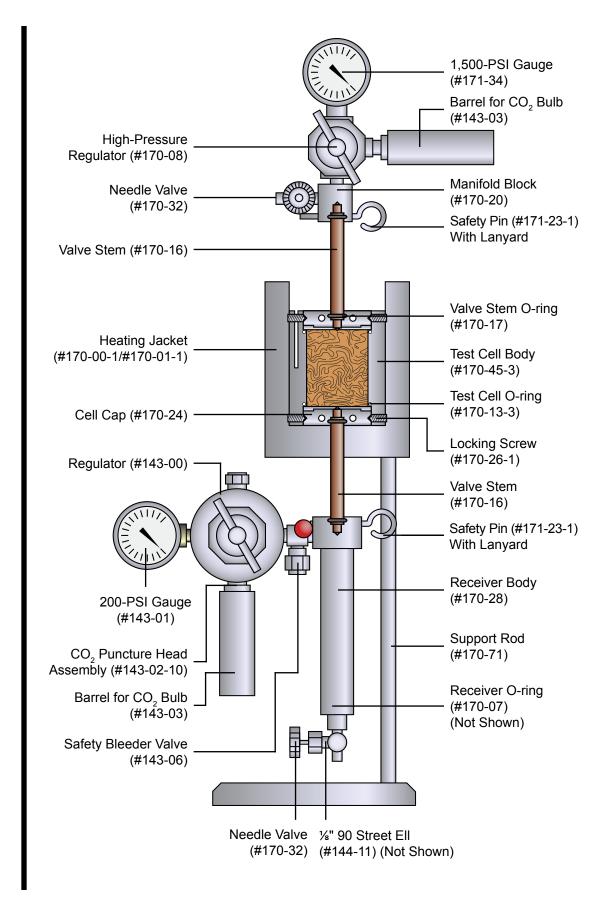

Warranty and Return Policy

Warranty:

OFI Testing Equipment, Inc. (OFITE) warrants that the products shall be free from liens and defects in title, and shall conform in all respects to the terms of the sales order and the specifications applicable to the products. All products shall be furnished subject to OFITE's standard manufacturing variations and practices. Unless the warranty period is otherwise extended in writing, the following warranty shall apply: if, at any time prior to twelve (12) months from the date of invoice, the products, or any part thereof, do not conform to these warranties or to the specifications applicable thereto, and OFITE is so notified in writing upon discovery, OFITE shall promptly repair or replace the defective products. Notwithstanding the foregoing, OFITE's warranty obligations shall not extend to any use by the buyer of the products in conditions more severe than OFITE's recommendations, nor to any defects which were visually observable by the buyer but which are not promptly brought to OFITE's attention.

In the event that the buyer has purchased installation and commissioning services on applicable products, the above warranty shall extend for an additional period of twelve (12) months from the date of the original warranty expiration for such products.

In the event that OFITE is requested to provide customized research and development for the buyer, OFITE shall use its best efforts but makes no guarantees to the buyer that any products will be provided.

OFITE makes no other warranties or guarantees to the buyer, either express or implied, and the warranties provided in this clause shall be exclusive of any other warranties including ANY IMPLIED OR STATUTORY WARRANTIES OF FITNESS FOR PURPOSE, MERCHANTABILITY, AND OTHER STATUTORY REMEDIES WHICH ARE WAIVED.

This limited warranty does not cover any losses or damages that occur as a result of:

- Improper installation or maintenance of the products
- Misuse
- Neglect
- Adjustment by non-authorized sources
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities
- Equipment, products, or material not manufactured by OFITE
- Firmware or hardware that have been modified or altered by a third party
- Consumable parts (bearings, accessories, etc.)

Returns and Repairs:

Items being returned must be carefully packaged to prevent damage in shipment and insured against possible damage or loss. OFITE will not be responsible for equipment damaged due to insufficient packaging.

Any non-defective items returned to OFITE within ninety (90) days of invoice are subject to a 15% restocking fee. Items returned must be received by OFITE in original condition for it to be accepted. Reagents and special order items will not be accepted for return or refund.

OFITE employs experienced personnel to service and repair equipment manufactured by us, as well as other companies. To help expedite the repair process, please include a repair form with all equipment sent to OFITE for repair. Be sure to include your name, company name, phone number, email address, detailed description of work to be done, purchase order number, and a shipping address for returning the equipment. All repairs performed as "repair as needed" are subject to the ninety (90) day limited warranty. All "Certified Repairs" are subject to the twelve (12) month limited warranty.

Returns and potential warranty repairs require a Return Material Authorization (RMA) number. An RMA form is available from your sales or service representative.

Please ship all equipment (with the RMA number for returns or warranty repairs) to the following address:

OFI Testing Equipment, Inc. Attn: Repair Department 11302 Steeplecrest Dr. Houston, TX 77065 USA

OFITE also offers competitive service contracts for repairing and/or maintaining your lab equipment, including equipment from other manufacturers. For more information about our technical support and repair services, please contact techservice@ofite.com.